WARNING: this unit needs to be connected to electrical power or contain a battery backup or all settings will be lost.

Alarm – Humidity – Temperature

- 1. Power the unit ON or OFF by hitting fourth key 👲. When in the off position, the internal clock may not maintain correct time.
 - 2. If necessary unlock the screen by simultaneously pressing the two middle keys; and —, you see the padlock in the lower left
 - corner go from locked to open:
 - 3. Press the MENU button
 - 4. Press the or select Fahrenheit (F) or Celsius (C) –
 - 5. Press the OK to confirm setting
 - 6. A temperature will appear in the TOP portion of the viewing screen and in the lower information bar following the **formation** and
 - , <u>SETUP</u> followed by <u>HIGH</u>. Press the **o**r **b**utton to increase or decrease the desired ALARM point for the (top window) temperature probe.
 - 7. Press OK, the fourth button.
 - 8. In the information bar at the bottom of the screen it will switch from high to low indicating that you are now setting the LOW alarm

point. Press the for button to increase or decrease the desired ALARM point.

- 9. Press OK, the fourth button.
- 10. A humidity will appear in the LOWER portion of the viewing screen and in the lower information bar following the **and**,

<u>SETUP</u> followed by <u>HIGH</u>. Press the **o**r **b**utton to increase or decrease the desired ALARM point for the humidity (lower window) probe.





- 12. In the information bar at the bottom of the screen it will switch from high to low indicating that you are now setting the LOW alarm
 - point. Press the for button to increase or decrease the desired ALARM point.
- 13. Press <mark>OK</mark>, the fourth button.
- 14. The information bar will read **SETUP** and **ON** will appear in the top portion of the screen indicating the unit is

active, after you have pressed OK. On this screen it may be turned off by pressing — or 🔻 button. When switched off you will see

OF in the lower portion of the screen, enter **OK**. Do this when you want to de-activate a current alarm. You will need to re-activate at a later time.



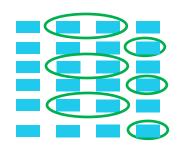

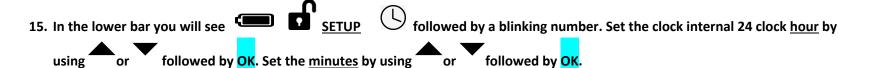

16. A decimal number will appear in the upper portion of the screen, this is the range of the temperature from the setpoint for the first probe (left input) by which the temperature needs to very to activate or deactivate an alarm. If your setpoint is 70° and you set this

range to 2°, the alarm will not go off until 72 it will not turn off until cooled 68. Using for button increase or decrease it to the desired setpoint. 1 or 2° difference are recommended unless you have some very tight constraints. Enter OK.

- 17. A decimal number will appear in the lower portion of the screen, this is the range of the humidity from the setpoint for the humidity probe (right input) by which the humidity needs to very to activate or deactivate an alarm. Enter OK.
- 18. The unit is now active in the padlock has switched to a locked position
- 19. "Will be visible to the left of the temperature if that probe is in alarm. The LED lights visible inside the vented ribs in the lower portion of the unit will be visible and if connected the external alarm will sound and be flashing a red light.
- 20. To inactivate an alarm, press the OK button until the ON symbol appears then press one of the for to switch to OF or in active

The unit cannot be turned off when in the setting. You must unlock the unit to turn it off. Some units do not hold accurate time when in the offsetting using button four.



