

## **CLOSING WHEELS**

ADJUSTING THE SPACING



Find a socket that measures between 1 7/16" and 1 1/2" (1.4"-1.5"). Size should be confirmed by measuring using a tape measure.



5

Space between the wheels can be adjusted using spacers at the center of the wheel.



2

Size can also be confirmed digitally. (1.4"-1.5")



6

Add or subtract washers as needed to reach the correct distance apart.



3

Grab socket using a pliers.



7

This can be done using spacers.



4

Pass the socket through the closest point between the shoulders of the wheels. Socket should fit snug, yet still be able to pass through the opening.



8

Reattached wheel with adjusted spacers.



Make sure closing wheels are centered over furrow before planting.